
TI

ASSEMBLY INSTRUCTION FOR 32511

Figure 2.

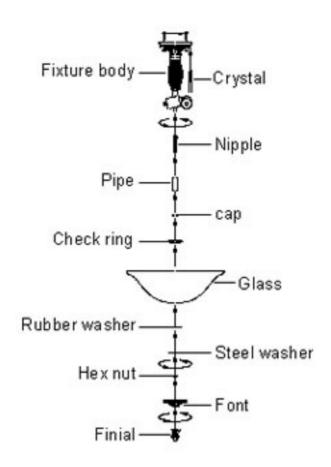

For direct ceiling mount: (refer to Figure 2.)

- Unravel the fixture supply and ground wires using wire cutters, trim the fixture supply and ground wires to approx. 6 inches in length from where wires exit top of fixture. Trim back wire jacket approx.3/4 inches.
- With power to the installation point OFF, attach the crossbar with (2) mounting screws to ceiling mounted outlet box with (2) outlet box screws.
- 3. Make wires connections: (We recommend 2 people for this step). Position the fixture under the outlet box. Attach house ground wire to fixture ground wire. Proceed to attach both to the crossbar using ground screw. Using wire connectors connect the house white wire to the fixture supply wire (ribbed side); connect the house black (or red) wire to the fixture supply wire (smooth side). Wrap all connections with approved electrical tape.
- 4. With the connections properly made, align and pass the (2) mounting screws attached to crossbar through (2) mounting holes in canopy on top assembly. Locate (2) ball nuts and thread onto ends of mounting screws. Hands tighten until snug to secure fixture to ceiling. Be sure there are no trapped or pinched wires.
- Screw nipple into the coupling at bottom of fixture body.
- Install proper bulbs (not provided) to each socket referring to the markings and labels on fixture for maximum wattage
- Raise pipe, cap, check ring, glass, rubber washer and steel washer up over the nipple, and secure with hex nut.
- 8. Place font over the nipple, and secure with finial.
- 9. Attach crystal to the hole of fixture body.
- 10. Restore power to the installation point ON. Retain this sheet for future reference.